

Seat Heating, Front , (4A3),(4A4),(4D0),(Q2J)


From January 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

Left Front Seat Temperature Sensor, Driver Seat Heating Element

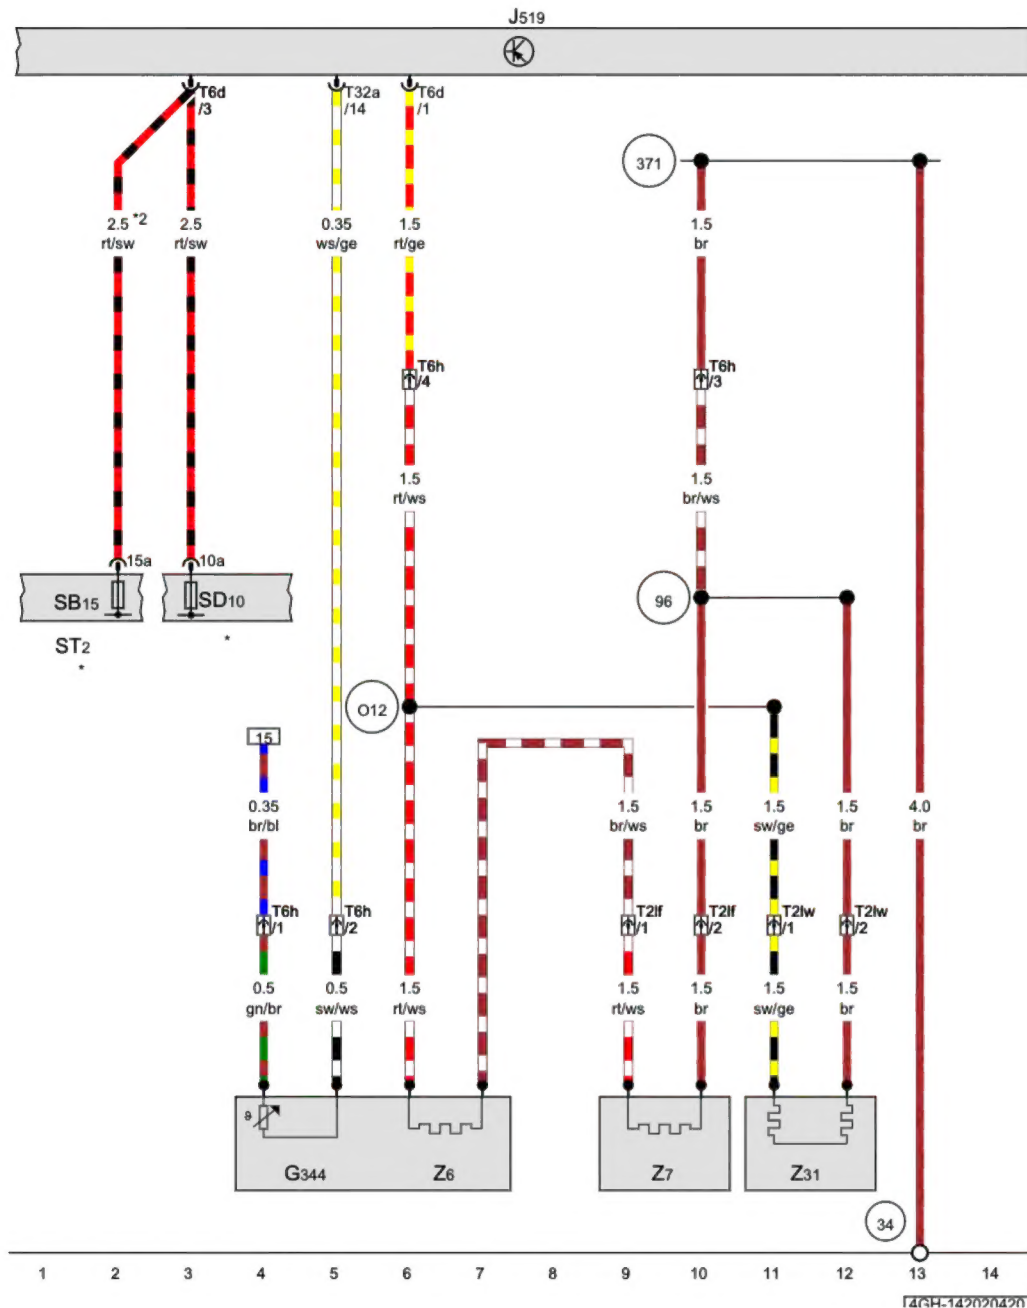


- G344 Left Front Seat Temperature Sensor
- J519 Vehicle Electrical System Control Module
- ST2 Fuse Panel 2
- SD10 Fuse 10 (On Fuse Panel D)
- SB15 Fuse 15 (On Fuse Panel B)
- T2lf 2-Pin Connector, In the Driver Seat, Black
- T2lw 2-Pin Connector, In the Driver Seat, Black
- T6d 6-Pin Connector
- T6h 6-Pin Connector, In the Coupling Point for the Left Front Seat, Green
- T32a 32-Pin Connector
- Z6 Driver Seat Heating Element
- Z7 Driver Backrest Heating Element
- Z31 Driver Seat Bolster Heater

- 34 Ground Connection Under Driver Seat
- 96 Ground Connection 1 (in Heated Seats Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)
- O12 Connection 1 (in Heated Seats Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions From June 2014

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

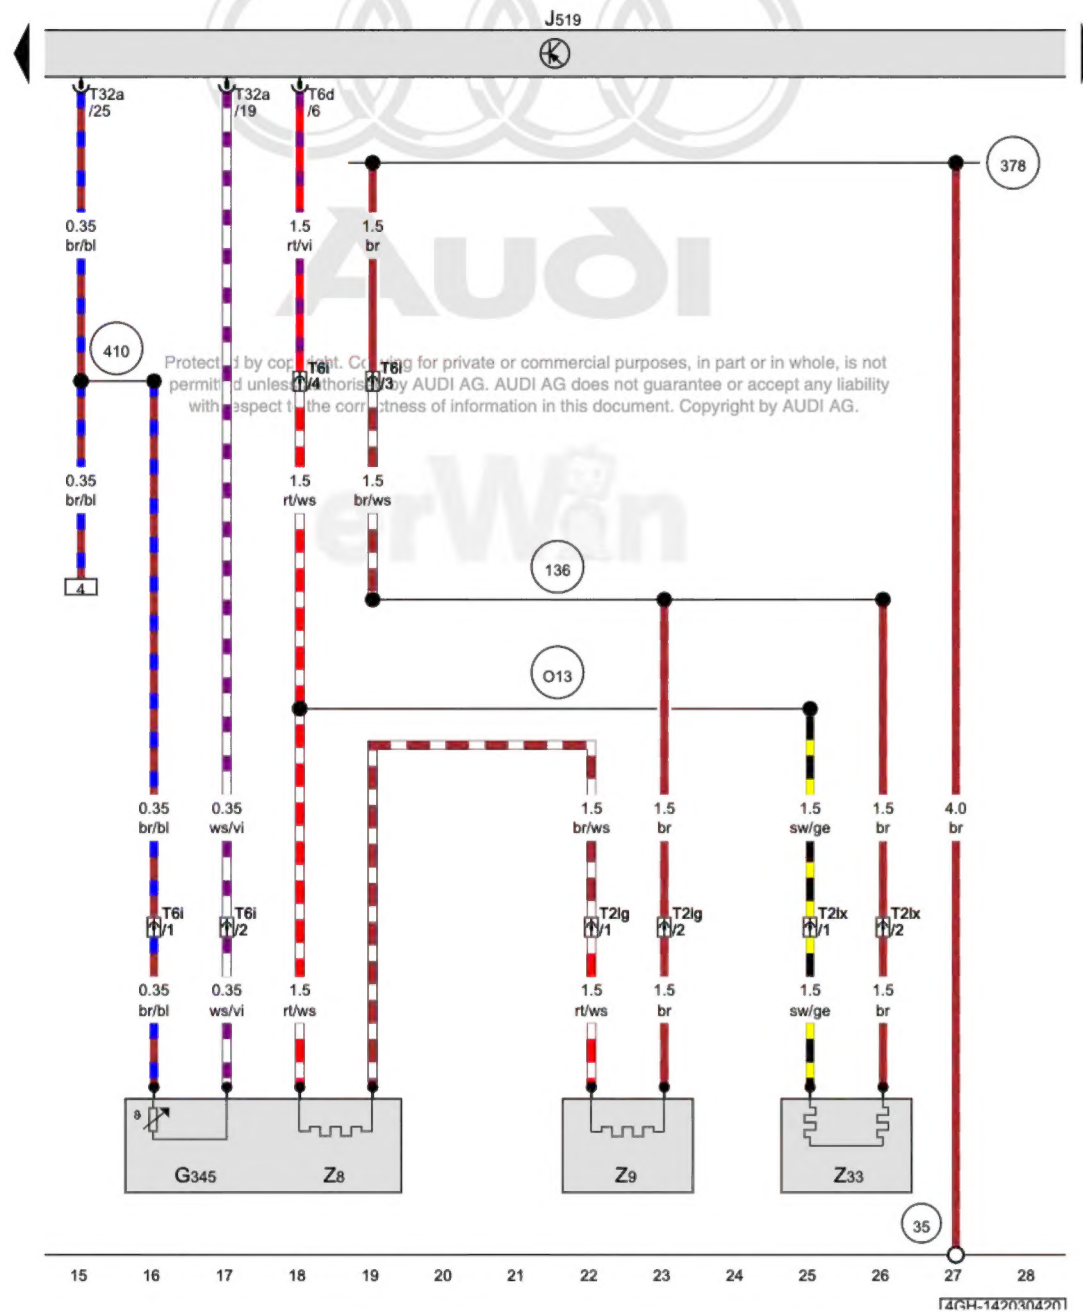


Right Front Seat Temperature Sensor, Front Passenger Seat Heating Element

- G345 Right Front Seat Temperature Sensor
- J519 Vehicle Electrical System Control Module
- T2lg 2-Pin Connector, In the Front Passenger Seat, Black
- T2lx 2-Pin Connector, In the Front Passenger Seat, Black
- T6d 6-Pin Connector
- T6i 6-Pin Connector, In the Coupling Point for the Right Front Seat, Green
- T32a 32-Pin Connector
- Z8 Front Passenger Seat Heating Element
- Z9 Front Passenger Backrest Heating Element
- Z33 Front Passenger Seat Bolster Heater
- 35 Ground Connection Under Front Passenger Seat
- 136 Ground Connection 2 (in Heated Seats Wiring Harness)
- 378 Ground Connection 13 (in Main Wiring Harness)
- 410 Sensor Ground Connection 1 (in Main Wiring Harness)
- O13 Connection 2 (in Heated Seats Wiring Harness)

Heated Driver Seat Adjuster, Heated Front Passenger Seat Adjuster

- E94 Heated Driver Seat Adjuster
- E95 Heated Front Passenger Seat Adjuster
- J255 Climatronic Control Module
- J519 Vehicle Electrical System Control Module
- J533 Data Bus on Board Diagnostic Interface
- T16c 16-Pin Connector
- T20c 20-Pin Connector
- * Refer to Applicable Wiring Diagram for Data Bus Networking

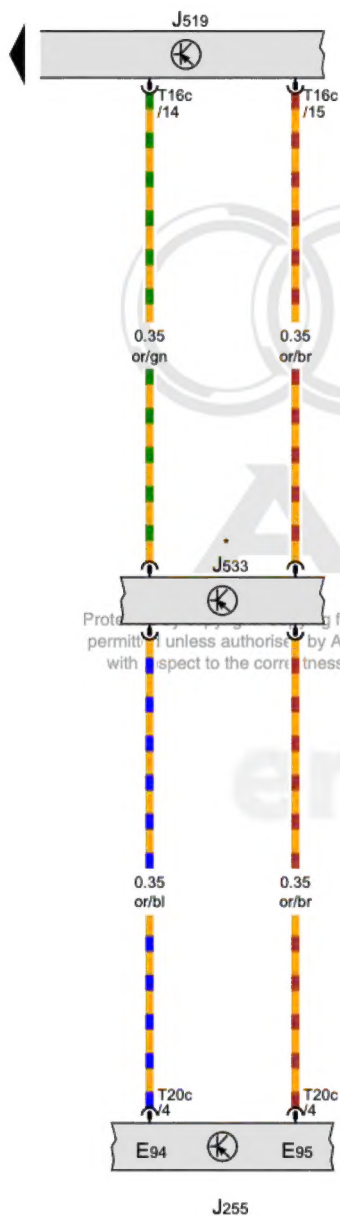

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink